



MD Dialer System

Combination Auto-Dialer
and Alarm System

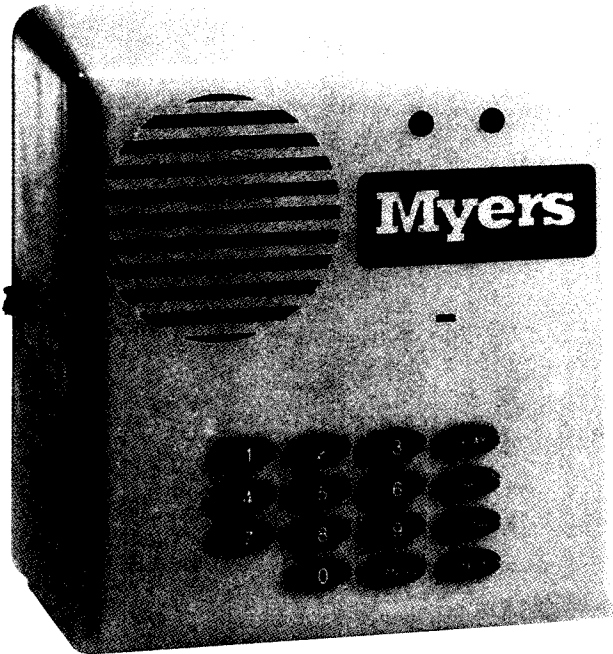

MYERS MD DIALER IS A COMBINATION AUTO-DIALER AND ALARM SYSTEM IN ONE COMPACT, EASY-TO-INSTALL ENCLOSURE. The MD control monitors three field selected conditions. If a problem is detected, the MD dialer sounds an audible alarm and automatically dials up to three field programmable phone numbers notifying individuals of existing alarm condition(s). For more information on the Myers MD dialer, contact your Myers distributor or the Myers Ohio sales office at 419-289-1144.

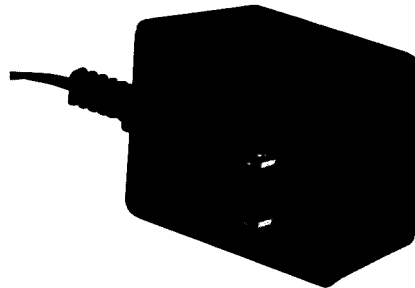

BENEFITS and FEATURES

- **Economical**
- **Provides reliable 24 hour/day monitoring**
 - Monitors 3 conditions
- **Automatically dials up to 3 phone numbers**
 - Delivers a personalized message for the existing alarm condition
- **Handles multiple alarm conditions**
 - Systematically dials to field programmable phone numbers
- **Alarm**
 - Sounds first and delays dialing to give the user a chance to correct the alarm before dialing.
- **Reliable operation during power outages**
 - Internal 9 volt battery power system
- **Digital memory**
 - Recalls data if power is removed
- **Personalized security code**
 - Prevents unauthorized program changes
- **Easy to install and program**

WHERE INNOVATION MEETS TRADITION


MD Dialer System

Combination Auto-Dialer
and Alarm System

Inputs

Outputs

Monitor Condition #1
Monitor Condition #2
Monitor Condition #3

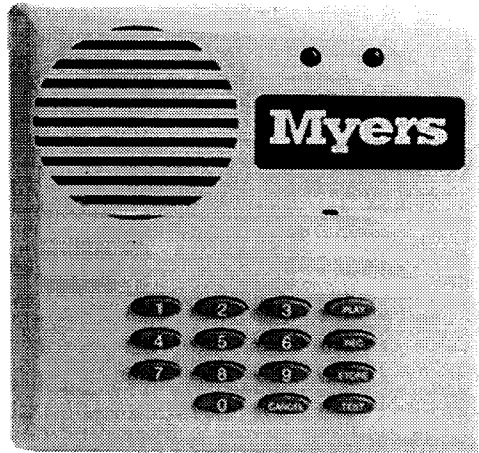

Auto-Dial Alarm Condition
Auto-Dial Power Fail

Telephone #1
Telephone #2
Telephone #3


Auxiliary Alarm Circuit

Designed for Indoor or Protected Use.

Operating Temperature Range	32° - 120° F
Operating Humidity Range	0% - 95%
Source Power	120VAC / 60 Hz
System Power	9VDC
Battery Back-Up	9VDC

*Myers MD Dialer mounts to industry standard electrical work box.

Dimensional Data

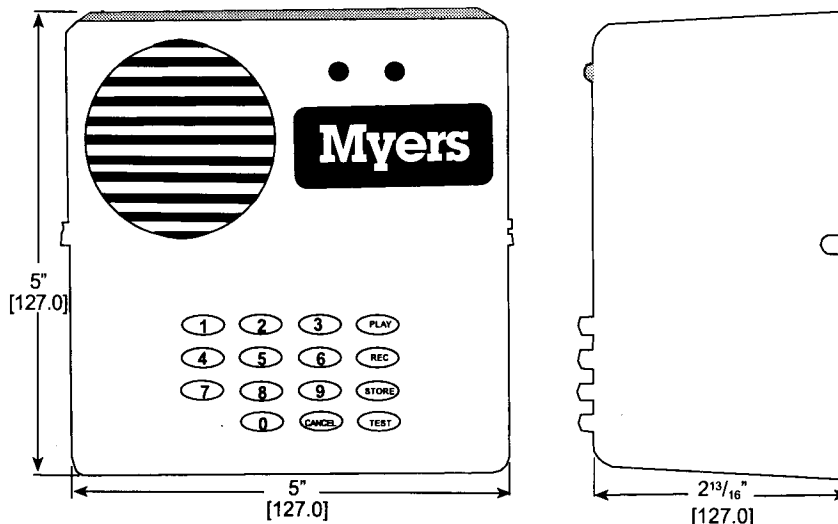

K4116 9/00
Printed in U.S.A.



Myers®
Pentair Pump Group

F. E. Myers, 1101 Myers Parkway, Ashland, Ohio 44805-1969
419/289-1144, FAX: 419/289-6658, www.femyers.com

Myers (Canada), 269 Trillium Drive, Kitchener, Ontario N2G 4W5
519/748-5470, FAX: 519/748-2553